

Multiport to PC-sync cable


(Part number 50300298)



As a new feature on the IQ4, you can now do the wake-up step directly from the IQ4 touch screen. This only requires using the new Multiport to PC-sync cable (part number 50300298).

How to use

1. Mount the IQ4 on the Technical Camera.
2. Connect the Phase One-cable from 12-pin multiport on the IQ4 to the PC-sync connector on the Copal shutter, or to the flash connector on the Schneider Kreuznach, Rodenstock or Sinar electronic shutter system.
3. If you are using a flash system, connect it to the flash sync connector on the IQ4.
4. Select the Camera Controls on the IQ4, then press on the Capture button on the IQ4 screen to wake up the back:

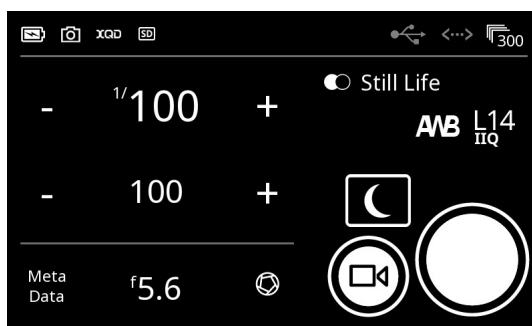

5. Trigger the mechanical shutter on the lens, preferably by using a shutter release cable.

When using a mechanical shutter on the Technical Camera lens, please ensure that Electronic Shutter (ES) is set to Off the IQ4 in the menu system under Camera > Electronic Shutter. When operating the IQ4 in ES mode, wake-up cables are not required.

Note that you need to have the IQ4 firmware version 1.01.18 or later installed to use the functionality that this cable provides.